




# Porte Miroir EUROFRAME Mirror Door

## Instructions d'installation

## Installation instructions


### 1. Installation des rails

Fixer le rail supérieur avec des vis 1 1/2" (38mm) de façon à ce que le fascia s'aligne avec le devant de l'ouverture. Fixer le rail du plancher à 7/8" (22mm) à l'intérieur de l'ouverture avec des vis de 5/8" (16mm).

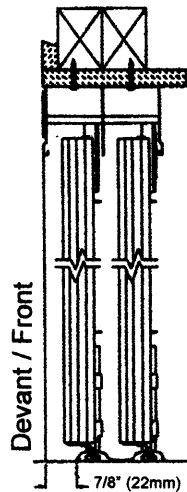


### 2. Installation des panneaux

De l'intérieur du placard, installer d'abord le panneau arrière. Pour ce faire, incliner le bas des panneaux vers l'extérieur et insérer les guides dans le rail supérieur.

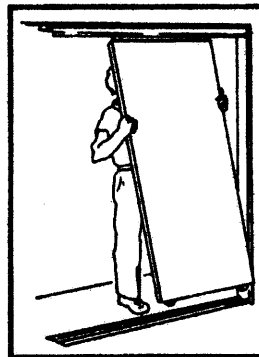

### 3. Ajustement des panneaux

Utiliser un tournevis pour ajuster les portes de niveau avec le cadrage du mur. Assurez-vous que les guides soient bien insérés dans le rail du plancher.

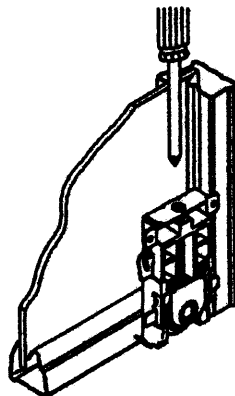

### 1. Install tracks

Fasten top track to header with 1 1/2" (38mm) screws. Fascia should be flush with front of opening. Fasten floor track to floor with 5/8" (16mm) screws locating 7/8" (22mm) inside opening.

### 2. Install doors

Stand behind door, inside wardrobe. Tilt bottom of door outward and insert top guides into rear track. Repeat and install front panel.

### 3. Adjust doors

Use a screwdriver to adjust doors vertically, while ensuring that the anti-jump tabs insert into the floor track.

## COLONIAL ELEGANCE INC.

3800 du Tricentenaire, Montreal, Quebec, Canada H1B 5T8

TEL.: (514) 640-1212 • 1 (800) 361-2030

marketing@colonialegance.com

www.colonialegance.com