

# GUIDE D'INSTALLATION PORTE MURALE

## Étape 1

À l'aide des vis de 1 1/4", fixez le guide de plastique blanc au bas du mur, du côté où le panneau coulissera et le plus près possible de l'ouverture.




## Étape 2

Placez la planche de bois de 5/8" au sol devant l'ouverture de la porte. Alignez la porte à son emplacement pour cacher l'ouverture. Appuyez la base de la porte sur la planche de bois.



## Étape 3

Marquez au mur l'emplacement du rail, enlevez la porte et vissez la planche de bois de 1/4" au mur à l'aide des vis de 3" à l'endroit où était le rail (assurez-vous de visser dans une structure solide derrière le mur).

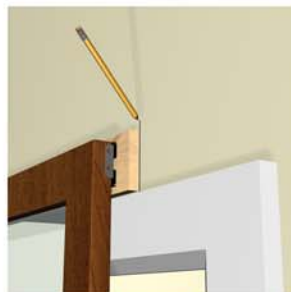

## Étape 4

Réinstallez la porte sur la planche de bois de 5/8", en tenant le rail et glissez la porte pour pouvoir insérer une vis dans le rail (1 3/4"), assurez-vous que la porte est de niveau et vissez les autres vis.



## Étape 5

Enlevez la planche de bois de 5/8" au sol et installez la deuxième section du guide de plastique blanc (coupez le guide au besoin).



**COLONIAL ELEGANCE INC.**

3800, Du Tricentenaire  
Montreal, Quebec, Canada H1B 5T8

[www.colonialegance.com](http://www.colonialegance.com)

TEL 514-640-1212 • 800-361-2030

FAX 888-640-1744

[info@colonialegance.com](mailto:info@colonialegance.com)

# INSTALLATION GUIDE FOR MURAL DOOR

## Step 1

Using 1 1/4" screws, attach the white plastic guide at the bottom of the wall, panel side, as close as possible to the opening.




## Step 2

Place the 5/8" wood plate to the ground, in front of the door opening. Align door to its location to hide the opening. Put the bottom of the door on the wood plate.



## Step 3

Mark the position of the track on the wall, remove the door and screw the 1/4" wood plate to the wall where the track was, using the 3" screws. (Be sure to screw in a stud)

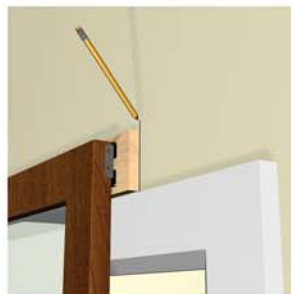

## Step 4

Put back the door on the 5/8" wood board, while holding the track, slide out the door to be able to screw the 1 3/4" screw. When the door is levelled, install the rest of the screws.



## Step 5

Remove the 5/8" wood board off the ground and install the second section of the white plastic guide. (Cut the guide if necessary)



**COLONIAL ELEGANCE INC.**

3800, Du Tricentenaire  
Montreal, Quebec, Canada H1B 5T8

[www.colonialegance.com](http://www.colonialegance.com)

TEL 514-640-1212 • 800-361-2030

FAX 888-640-1744

[info@colonialegance.com](mailto:info@colonialegance.com)