


### 1. BUILD THE ROUGH OPENING

to install the pre-assembled pocket door frame.

#### ROUGH OPENING REQUIRED FOR 1 POCKET DOOR FRAME


Width Single door	A Rough opening required width	B Rough opening required height
24"	49 <sup>3</sup> / <sub>8</sub> "	83 <sup>3</sup> / <sub>4</sub> "
28"	57 <sup>3</sup> / <sub>8</sub> "	83 <sup>3</sup> / <sub>4</sub> "
30"	61 <sup>3</sup> / <sub>8</sub> "	83 <sup>3</sup> / <sub>4</sub> "
32"	65 <sup>3</sup> / <sub>8</sub> "	83 <sup>3</sup> / <sub>4</sub> "
36"	73 <sup>3</sup> / <sub>8</sub> "	83 <sup>3</sup> / <sub>4</sub> "

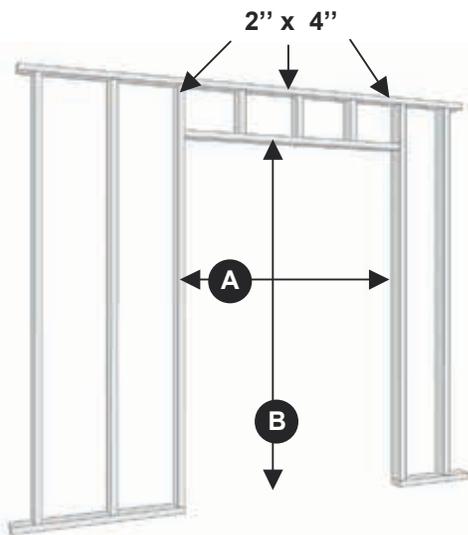

### ADJUSTABLE FRAME ONLY:

### 2. CUT FOR THE LENGTH OF TRACK

- A. At the mark corresponding to the size of the desired door, **CUT WOODEN BOX AND TRACK TOGETHER** (track is made of aluminum and can be cut with wood saw).
- B. Return the box and **ONLY CUT THE FINISHING STICK** to desired mark.
- C. **REMOVE AND DISCARD** the end cut.

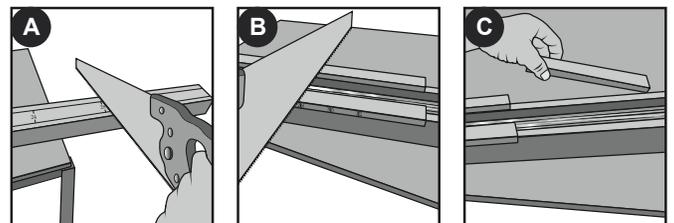


### 3. EXTEND THE POCKET DOOR FRAME

- 24 5/8" for a 24" door
- 28 5/8" for a 28" door
- 30 5/8" for a 30" door
- 32 5/8" for a 32" door
- 36 5/8" for a 36" door

### 4. INSTALL THE POCKET DOOR FRAME

- A. **INSERT THE TRACK** onto top of cage. Fix the tips with nails
- B. **FOR THE ADJUSTABLE FRAME**, fix at center with screws.
- C. **INTRODUCE THE FRAME** in built opening. **MAKE SURE** the track is level **FOR ADJUSTABLE POCKET DOOR FRAME, ADJUST THE OPENING** of the door frame to have the same size on top and bottom.
- D. **INSTALL THE FRAME** to the sides opening and to the floor.
- E. **REMOVE AND DISCARD THE TRANSPORTATION** blocks.
- F. **CENTER THE BUMPER** to the interior of the frame.

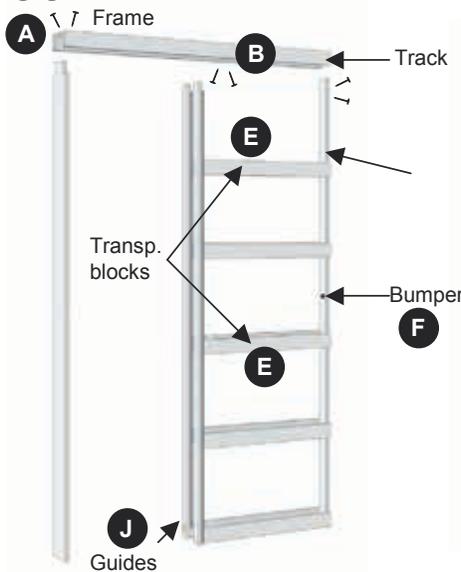

- G. **ATTACH THE LOCK TABS** onto the top of the door, 2" from each end, facing the same direction.
- H. **INSERT HANGERS** into track alternating wheel positions.

- I. **MOUNT DOOR** by placing lock tabs under adjusting bolt of hangers. If necessary, adjust the lock tab by using the wrench that is provided, to make the door level.

